


REINFORCED CONCRETE STRUCTURE – SETTING OF THE PVC LINER – " FINNISH SPILLWAY BORDER "

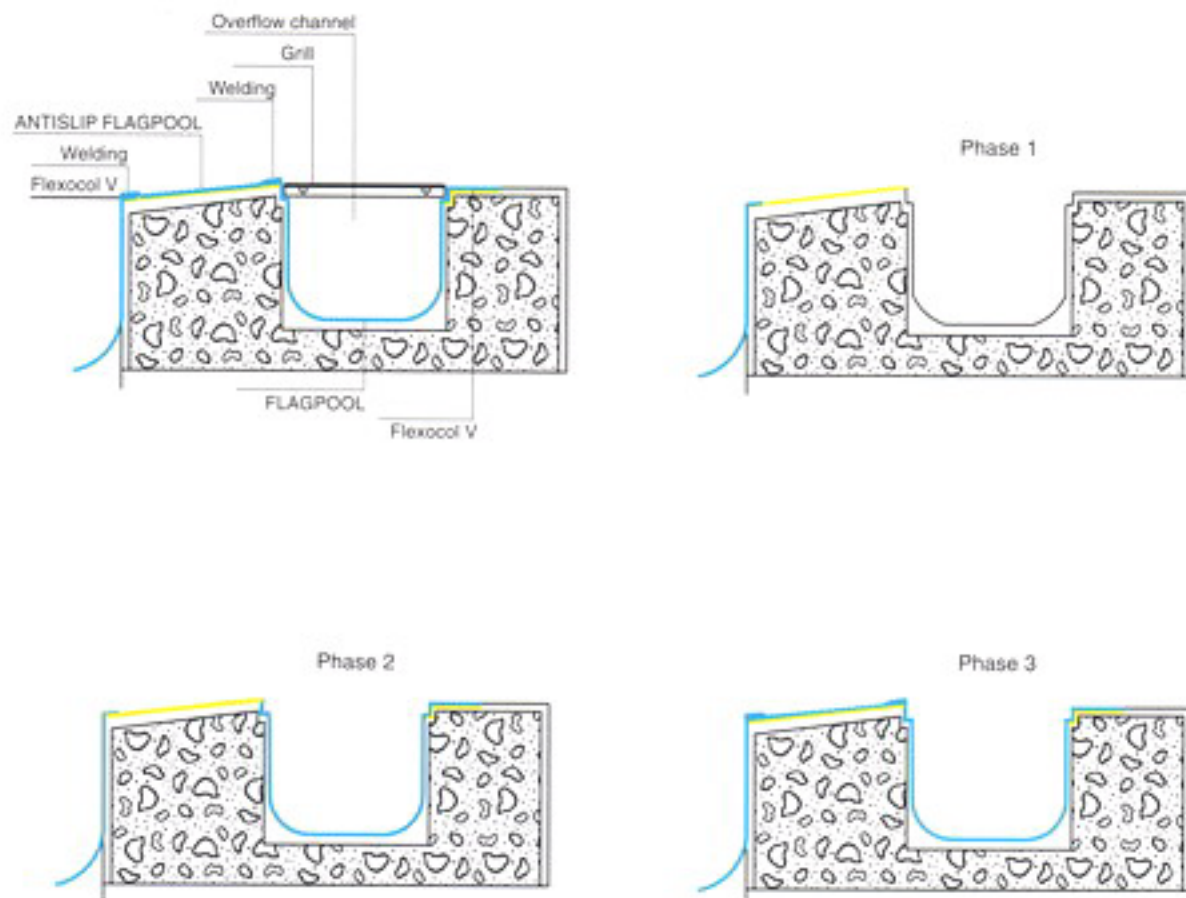

Phase (1)

Set the **FLAGPOOL** membrane on the vertical wall: return the membrane of about 5 cm and glue it with **FLEXOCOL V** in the slanted part at the beginning of the walking area.

Phase (2)

Position the **FLAGPOOL** membrane in the channel and under the external floor; glue the membrane with **FLEXOCOL V**.

Phase (3)

Set the **SLIDING PREVENTION FLAGPOOL** in the walking area, glue the membrane with **FLEXOCOL V**; perform the hot air welding in the connection corner between the wall and the walking area.

