



**STEEL PANEL STRUCTURE – SETTING OF PVC LINER –
"SPILLWAY BORDER – PVC CHANNEL"**

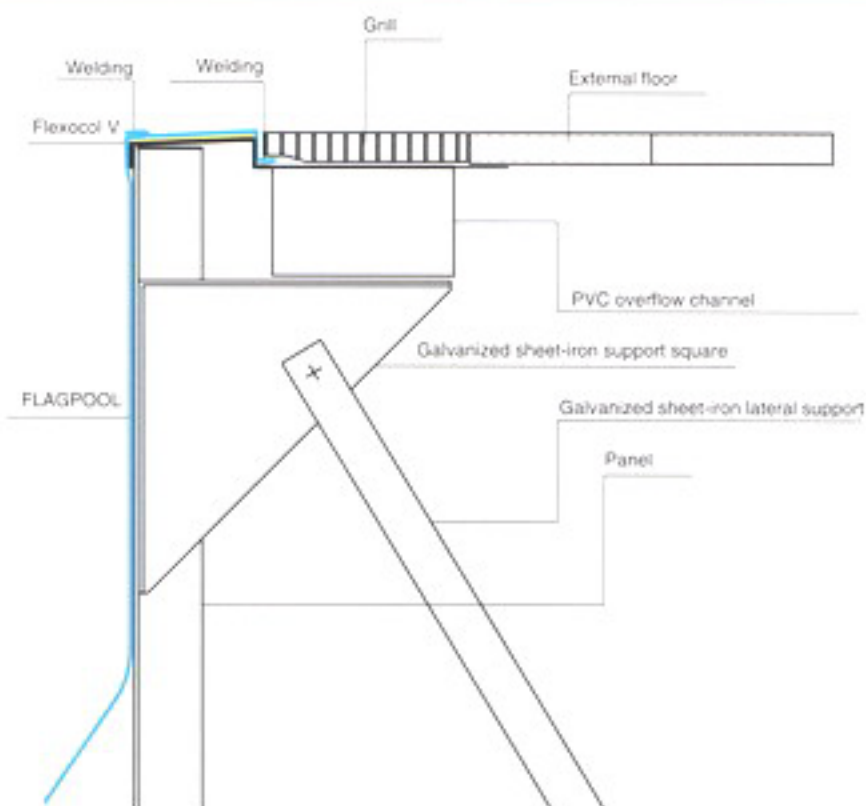

Phase (1)

Set the **FLAGPOOL** membrane on the vertical wall; return the membrane of about 5 cm and glue it with **FLEXOCOL V** on the horizontal surface in the walking area.

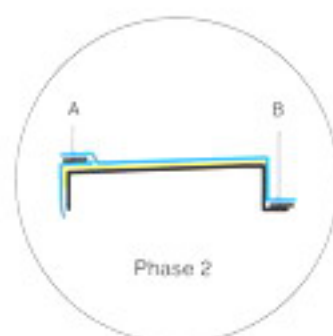

Phase (2)

Set the **SLIDING PREVENTION FLAGPOOL** starting from the walking area up to the starting part of the PVC channel; glue the membrane with **FLEXOCOL V** and hot

air welding as indicated in the drawing at points A and B.

